


Guideline for valg af sejlstørrelse

ABC Sejl

Alle mål i cm

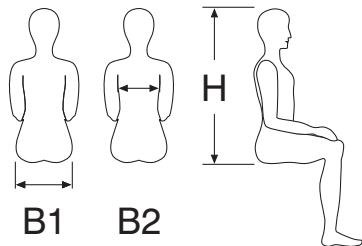

Størrelse / cm	H	B1	B2 ^{x)}	B2 ^{xx)}
Kids 2-4				46 - 54
Kids 4-6	45 - 60	25 - 30		50 - 65
Kids 6-10	55 - 70	28 - 35		51 - 72
Kids 10-14	55 - 70	28 - 35		
Kids 10-16				56 - 75
XS	75 - 82	33 - 37	70 - 105	
S	80 - 87	36 - 40	75 - 110	
M	85 - 92	39 - 43	80 - 120	
L	90 - 97	42 - 45	90 - 130	
XL	95 - 102	45 - 49	100 - 140	
2XL	95 - 102	48 - 52	110 - 150	
3XL	95 - 102	54 - 58		
4XL	95 - 102	57 - 63		
5XL	95 - 102	62 - 73		

B2 = Brystmål

x) Guideline for valg af Active Trainer

xx) Guideline for valg af Active Vest Kids